Manual

TDF-2511/3011/4011
TDF-2511 Inox
TFF-4011

Electric fan
Elektrisk fläkt

SE ANVÄNDARHANDBOK
GB USER MANUAL

Feiyue Group Europé Aps
Sundsholmen 14
DK 9400 Nørresundby, Denmark

Bruksanvisning (SE) **3**

1. Specifikation **3**

2. Konstruktion **4**

TDF-2511 4

TDF-3011/4011 4

TDF 2511 Inox 5

TFF-4011 5

3. Användning **6**

4. Säkerhetsvarning **6**

5. Rengöring **7**

6. Garantivillkor **7**

7. Miljöskydd **7**

Directions for Use (GB) **8**

1. Specification **8**

2. Components **9**

TDF-2511 9

TDF-3011/4011 9

TDF 2511 Inox 10

TFF-4011 10

3. Operation instruction **11**

4. Safety warnings **11**

5. Cleaning **12**

6. Warranty Provisions **12**

7. Environmental Protection **12**

SE Funktionerna i denna bruksanvisning publiceras med reservation för ändringar.
GB The features described in this manual are published with reservation to modifications.

Bruksanvisning (SE)

Dessa produkter är endast avsedda för användning i hushållet.
Läs denna bruksanvisning noggrant innan du använder produkten.
Spara bruksanvisningen för framtida behov.

1. Specifikation

Bordsfläkt

Modell nr.	TDF-2511	TDF-3011	TDF-4011
Beskrivning	Bordsfläkt Ø23 cm	Bordsfläkt Ø30 cm	Bordsfläkt Ø40 cm
Spänning / Frekvens	230V~/50Hz	230V~/50Hz	230V~/50Hz
Effekt nominell	25W	40W	50W

Bordsfläkt Inox

Modell nr.	TDF-2511 Inox
Beskrivning	Bordsfläkt Ø25 cm
Spänning / Frekvens	230V~/50Hz
Effekt nominell	30W

Golvfläkt

Modell nr.	TFF-4011
Beskrivning	Golvfläkt Ø40 cm
Spänning / Frekvens	230V~/50Hz
Effekt nominell	50W

2. Konstruktion

TDF-2511

1. Frontskydd
2. Fläkt
3. Mutter för skydd
4. Bakre skydd
5. Motoraxel
6. Motorhus
7. Ocilleringsreglage
8. Stativ
9. Hastighetsväljare
10. Fot

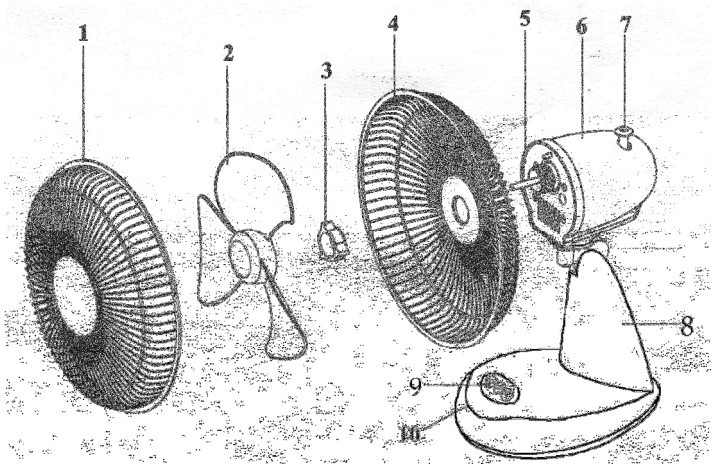

TDF-3011/4011

1. Frontskydd
2. Fläkt
3. Mutter för skydd
4. Bakre skydd
5. Motoraxel
6. Motorhus
7. Ocilleringsreglage
8. Stativ
9. Hastighetsväljare
10. Fot

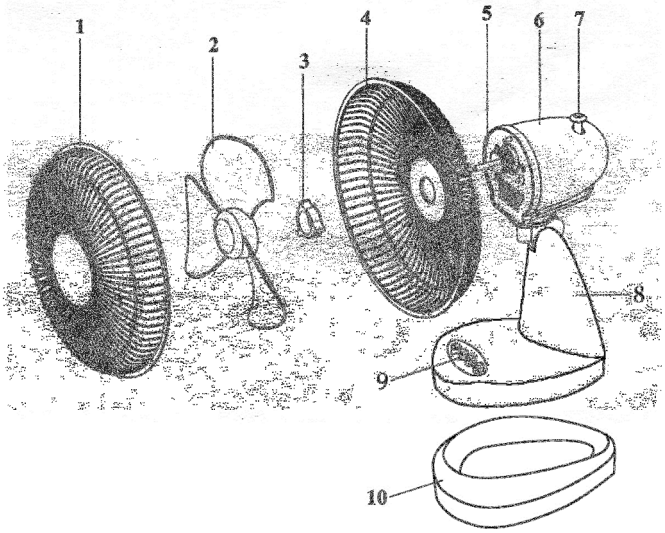

Montering av TDF-2511/3011/4011

1. Lossa muttern för skyddet från motorn.
2. Placera bakre skyddet mot motorhuset och skruva fast det ordentligt med muttern
3. Sätt på fläkten på motoraxeln. Fäst den genom att vrida den moturs. Kontrollera att den roterar lätt och utan att skrapa i.
4. Fixera frontskyddet mot bakre skyddet och fast det med clipsen

TDF 2511 Inox

1. Frontskydd
2. Fläkt
3. Mutter för skydd
4. Bakre skydd
5. Motoraxel
6. Motorhus
7. Ocilleringsreglage
8. Kåpa
9. Fot
10. Hastighetsväljare
11. Dekal

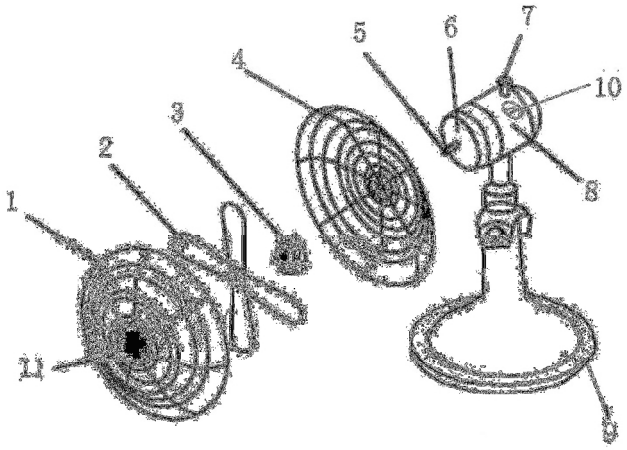

Montering av TDF-2511 Inox

1. Lossa muttern för skyddet från motorn.
2. Placera bakre skyddet mot motorhuset och skruva fast det ordentligt genom att skruva på muttern medurs.
3. Tryck på fläkten på motoraxeln. Var försiktig så att inte bladen skadas eller böjs. Kontrollera att den roterar lätt och utan att skrapa i.
4. Fixera frontskyddet mot bakre skyddet och fast det med clipsen

TFF-4011

1. Frontskydd
2. Fläkt
3. Mutter för skydd
4. Bakre skydd
5. Motoraxel
6. Motorhus
7. Ocilleringsreglage
8. Hastighetsväljare
9. Reglagehus
10. Låsskruv
11. Rör
12. Röranslutning
13. Nedre rör
14. Fot

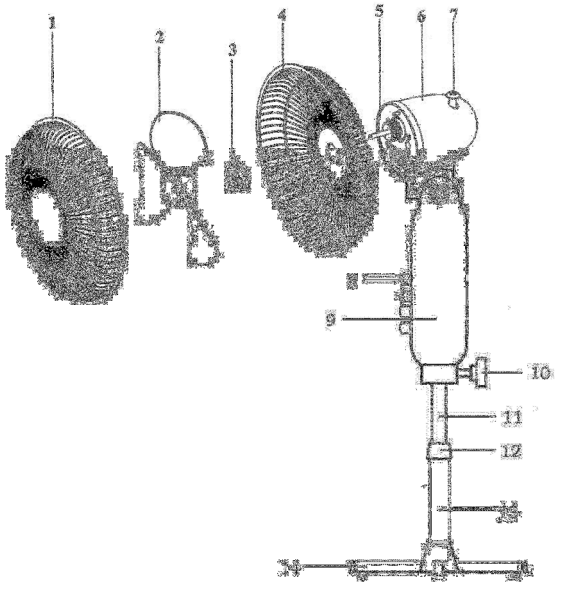

Montering av TFF-4011

1. Montera ihop stativet och fläkthuset. Drag åt höjdregleringsskruven och se till att stativet star stadigt på golvet.
2. Lossa muttern för skyddet från motorn.
3. Placera bakre skyddet mot motorhuset och skruva fast det ordentligt genom att vrida muttern medurs.
4. Sätt på fläkten på motoraxeln. Fäst den genom att vrida den moturs. Kontrollera att den roterar lätt och utan att skrapa i.
5. Fixera frontskyddet mot bakre skyddet och fäst det med clipsen.

3. Användning

- Kontrollera att apparatens spänning överensstämmer med elnätets spänning innan du sätter i stickkontakten.
- Rikta in fläkten och se till att den står stadigt.
- Välj hastighet med hastighetsväljaren
- För att stoppa väljer du **OFF/0** på hastighetsväljaren.

Oscillering

- Tryck oscilleringsknappen på motorhusets ovansida nedåt för att starta oscillering under drift (se resp fig).
- Dra oscilleringsknappen uppåt för att stoppa oscilleringen.

Riktning

Luftströmmens riktning kan justeras vertikalt:

- Flytta motorenheten "K" uppåt eller nedåt för att ändra den vertikala vinkeln (fig. 4). Ett klickande ljud hörs under justeringen.

Höjdjustering (enbart TFF-4011)

- Lossa höjdjusteringsskruven "10" och justera fläkten till önskad höjd genom att dra upp eller trycka ned det inre röret. Kom ihåg att hålla i fläktstommen medan du lossar skruven.
- Dra åt höjdjusteringsskruven "10" efter justeringen.

4. Säkerhetsvarning

Följ dessa punkter för att säkerställa en bekväm funktion och för att undvika fara orsakat av felaktig användning.

1. Läs bruksanvisningen noggrant före användning
2. Försäkra dig om att apparatens märkspänning på typskylten på baksidan överens stämmer med den spänning den skall kopplas till.
3. Se till att stickkontakten är ordentligt isatt i ett jordat strömuttag.
4. Uttag och säkringar skall vara dimensionerade för den ström som apparaten förbrukar. Ta också hänsyn till eventuella andra förbrukare som är inkopplade på samma strömkrets.
5. Lämna inte barn utan uppsikt när apparaten är påkopplad. Välj placering med hänsyn till barns säkerhet och låt inte nätkabeln hänga ner inom räckhåll för barnen.
6. Använd inte apparaten utomhus. Använd endast enheten till det den är avsedd för.
7. Apparaten får under inga omständigheter doppas i vatten eller andra vätskor. Rör inte apparat, stickkontakt eller kabel med våta händer.
8. Har nätkabeln blivit skadad eller sliten skall den bytas ut innan apparaten används vidare. Kontakta inköpsstället för anvisning till auktoriserat service center.
9. Om produkten mot förmodan inte fungerar tillfredställande kontakta inköpsstället för åtgärd. Försök inte skruva isär produkten och laga den själv.
10. Vid rengöring stäng av apparaten, drag ur stickkontakten och vänta tills plattan svalnat helt.

5. Rengöring

- Drag ur stickkontakten ur vägguttaget före rengöring.
- Doppa aldrig apparaten, kabel eller stickkontakt i vatten eller andra vätskor.
- Torka av apparaten med en fuktig trasa. Vid behov kan rengöringsmedel användas.
- Använd inte slipande rengöringsmedel eller slipande svamp.
- Skall apparaten ställas undan, se till att den är kallt rent och torr innan den ställs på en torr ventilerad förvaringsplats.

6. Garantivillkor

Garantitiden för denna produkt är 1 år från och med inköpsdatum. Under denna period repareras alla defekter i material eller utförande kostnadsfritt. Följande villkor gäller rörande denna garanti:

1. Vi tillbakavisar uttryckligen alla övriga ersättningskrav, inklusive ersättning för följdskador.
2. Garantin förlängs inte i samband med reparationer eller byten av delar som sker inom garantiperioden.
3. Om produkten modifieras, tillförs delar som inte är original eller repareras av en tredje part gäller inte garantin längre.
4. Garantin gäller endast om daterat köpebevis i original visas upp och om detta köpebevis inte innehåller några ändringar.
5. Garantin täcker inte skador som uppstått genom hantering som inte är i enlighet med bruksanvisningen, försummelse eller skadegörelse
6. Köparen står för transportkostnader och ansvarar för eventuella risker i samband med att produkten eller dess delar förflyttas.

För att undvika onödiga kostnader rekommenderar vi att du alltid först läser igenom bruksanvisningen noga. Om denna inte erbjuder någon lösning bör du ta med produkten till återförsäljaren för reparation.

7. Miljöskydd

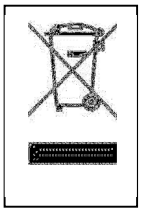

När apparaten inte längre fungerar måste den kasseras på ett sådant sätt att den skadar miljön i minsta möjliga mån och i enlighet med de regler som gäller i din kommun.

Directions for Use (GB)

Please read the instructions carefully before using the product and keep it for future reference.
This product is intended for household use only.

1. Specification

Desk fan

Model No.	TDF-2511	TDF-3011	TDF-4011
Description	Desk Fan Ø23 cm	Desk Fan Ø30 cm	Desk Fan Ø40 cm
Voltage / Frequency	230V~/50Hz	230V~/50Hz	230V~/50Hz
Power rated	25W	40W	50W

Table fan Inox

Model No.	TDF-2511 Inox
Description	Floor Fan Ø25 cm
Voltage / Frequency	230V~/50Hz
Power rated	30W

Floor fan

Model No.	TFF-4011
Description	Floor Fan Ø40 cm
Voltage / Frequency	230V~/50Hz
Power rated	50W

2. Components

TDF-2511

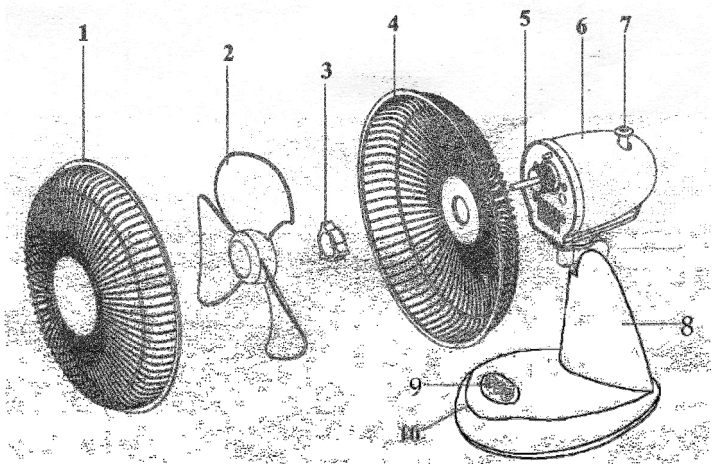

11. FRONT GUARD
12. FAN BLADE
13. GUARD MOUNTING NUT
14. REAR GUARD
15. MOTOR SHAFT
16. MOTOR HOUSING
17. OSCILLATION KNOB
18. STAND
19. SPEED SWITCH
20. BASE

TDF-3011/4011

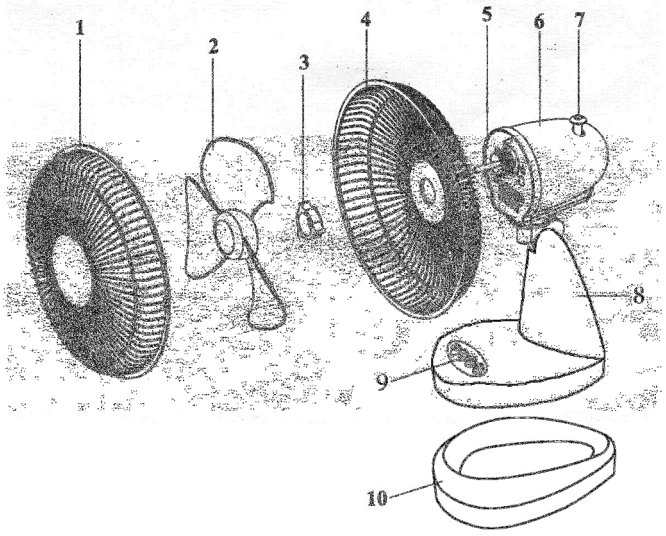

1. FRONT GUARD
2. FAN BLADE
3. GUARD MOUNTING NUT
4. REAR GUARD
5. MOTOR SHAFT
6. MOTOR HOUSING
7. OSCILLATION KNOB
8. STAND
9. SPEED SWITCH
10. BASE

Assembly TDF-2511/3011/4011

5. Loosen the Guard Mounting Nut from the Motor Housing.
6. Position the rear guard firmly to the motor housing and then fasten it by turning the guard mounting nut clockwise tightly.
7. Push the blade along motor shaft. Fasten it firmly with the spinner by turning it counter clockwise. Check that it rotates easy.
8. Hang the front guard to rear guard with the position fixer provided at the rim of guard. Fix together with the clips provided.

TDF 2511 Inox

1. FRONT GUARD
2. BLADE
3. GUARD MOUNTING NUT
4. REAR GUARD
5. MOTOR SHAFT
6. MOTOR
7. OSCILLATION KNOB
8. REAR COVER
9. BASE
10. CONTROL SWITCH
11. DECORATIVE PLATE

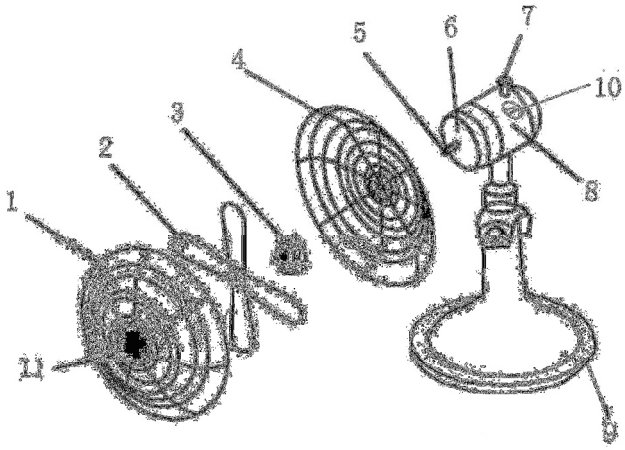

Assembly TDF-2511 Inox

1. Loosen the Guard Mounting Nut from the Motor Housing.
2. Position the rear guard firmly to the motor housing and then fasten it by turning the guard mounting nut clockwise tightly.
3. Push the blade onto the motor shaft. Be careful not to bend the fan blades.
4. Hang the front guard to rear guard with the position fixer provided at the rim of guard. Fix together with the clips provided

TFF-4011

15. FRONT GUARD
16. FAN BLADE
17. GUARD MOUNTING NUT
18. REAR GUARD
19. MOTOR SHAFT
20. MOTOR HOUSING
21. OSCILLATION KNOB
22. SPEED SWITCH
23. FAN HEAD NECK
24. SECURING KNOB
25. POLE
26. PIPE CONNECTOR
27. LOWER PIPE
28. BASE

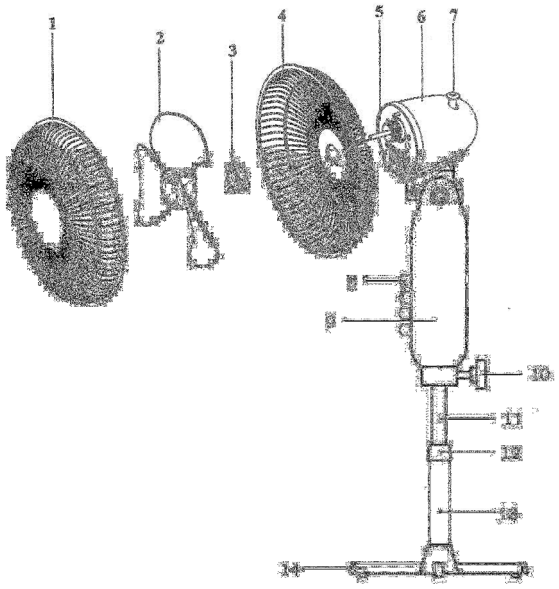

Assembly TFF-4011

6. Assembly the stand and main body. Secure screws and make sure it is standing stable on the floor.
7. Loosen the Guard Mounting Nut from the Motor Housing.
8. Position the rear guard firmly to the motor housing and then fasten it by turning the guard mounting nut clockwise tightly.
9. Push the blade along motor shaft. Fasten it firmly with the spinner by turning it counter clockwise.
10. Hang the front guard to rear guard with the position fixer provided at the rim of guard. Fix together with the clips provided

3. Operation instruction

All fans

1. Placed the fan on a stable and flat surface
2. Direct the fan according to your need.
   The fan head can be tilted to your optimal need.
   The floor fan can be adjusted to different height. Be sure you hold the main body before loosening the height locking screw.
3. Plug in to the mains outlet
4. Select fan speed with the speed selector
5. If oscillation is needed push down the oscillation knob.
   Stop oscillation by pulling up the knob again
6. Switch off the fan by pressing the OFF/0 button

4. Safety warnings

In order to use the product more conveniently and avoid any danger caused by wrong operation, please pay attention to the notices。

- Read the manual carefully before use.
- The appliance should be placed on a stable and flat surface when operating to avoid overturning.
- Under no circumstances must the appliance be placed immersed in water or other liquid, or come into contact with such. Do not use the appliance with wet or moist hands.
- Before connecting of the appliance check that voltage indicated on the rating label corresponds to the mains voltage in your home.
- Do not use the appliance in damp places with high humidity like bathrooms and not outdoors.
- Never touch the blades with hand or any object!
- Use the appliance only for the intended purpose.
- Always remove the plug from the power supply whenever the appliance is not in use, before cleaning the appliance or whenever a disturbance occurs. Switch off the appliance beforehand. Pull on the plug, not on the cord.
- In order to protect children from the dangers of electrical appliance shock, never leave them unsupervised with the appliance. When selecting the location for your appliance, do so in such a way that children do not have access to the appliance. Take care to ensure the cord does not hang down.
- Test the appliance and the cord regularly for damage. If there is damage of any kind, the appliance should not be used.
- Keep the appliance and the cord away from heat and moisture.
- Never leave the appliance unsupervised. Switch off the appliance whenever you are not using it, even if this is only for a moment.
- If the appliance becomes moist or wet, remove the mains plug from the power supply immediately.
- If the function of the unit is in trouble, please send the product to maintenance center or after-sale service. Please don't disassemble the unit and change the spare parts by yourself.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

5. Cleaning

- Always unplug from wall socket before cleaning.
- Never immerse the appliance, cord or plug in water or other liquids.
- Clean the outside with a damp cloth. Use washing-up liquid in case of hard stains.
- The fan guards and the fan blade can be removed for cleaning. Be careful not to damage the fan blade.
- Do not use scratching cleaning agent or any corrosive chemicals.

6. Warranty Provisions

This product comes with a 12-month warranty starting on the date of purchase. Within this period any defects in material or workmanship will be repaired without any charge. The following provisions shall apply regarding this warranty:

1. We expressly dismiss all other claims for damage, including consequential damages;
2. Any repairs or replacements of components within the term of the warranty will not result in an extension of the term of the warranty;
3. The warranty will no longer apply if the product has been modified, non-original parts have been used, or if it has been repaired by third parties;
4. The warranty will only apply, when you present the original, dated proof of purchase, provided no changes have been made to it;
5. The warranty will not apply to damage caused by actions not in compliance with the Directions for Use, neglect, vandalism;
6. Transportation costs and the risk involved during the transportation of the product or its components will always be the responsibility of the purchaser.

In order to avoid unnecessary costs, we recommend that you always read the Directions for Use carefully first. If they offer no solution, please take the product to your dealer for repair.

7. Environmental Protection

Waste electrical products should not be disposed of with household waste.Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.